

# CHEAT SHEET- LIB 1326

## **BLACK SCREEN function**

1. Press DISPLAY MUTE in a/v rack (yellow button)
2. To disengage, press DISPLAY MUTE again.

## **DVD**

1. Turn projector ON pressing DISPLAY for 2 seconds (red button)
2. Press the button labeled DVD (input 1)
3. Use the remote or buttons on DVD player to control DVD.
4. Control volume by turning OUTPUT LEVEL on mixer (located on far right).

## **VCR**

1. Turn projector ON pressing DISPLAY for 2 seconds (red button)
2. Press the button labeled VCR (input 2)
3. Use the remote or buttons on VCR player control tape.
4. Control volume by turning OUTPUT LEVEL on mixer (located on far right)

## **TV (return to Channel 1 when done)**

1. Turn projector ON pressing DISPLAY for 2 seconds (red button)
2. Press VCR (input 2). Cable TV runs through the VHS deck.

## **Laptop**

1. Connect provided VGA cable to a/v rack input. Insert audio jack for sound.
2. Connect your computer to the VGA cable. Connect the mini audio cable to your laptop headphone jack for sound.
3. Press the button labeled COMPUTER (RGB)
4. Control volume by turning OUTPUT LEVEL on mixer (located on far right)

## **Cassette Tape**

1. Insert cassette tape upright into deck.
2. Use the buttons on Cassette player to control tape.
3. Control volume by turning OUTPUT LEVEL on mixer

## **HELPFUL HINTS:**

1. *Normal Mode* will allow you to play audio and video from one source.
2. *Mixer Mode* will allow you to mix your selection of video and audio individually.  
Example: Show DV Cam tape with audio from CD. (In the mixer mode make sure the volume of your source is up on the mixer located in the rack)