

CHEAT SHEET- LIB 3301

DVD

1. Turn data projector on by pressing ON/OFF for 2 seconds.
2. Press the button labeled DVD (input 1)
3. Use the remote or buttons on DVD player to control DVD.
4. Control volume by turning OUTPUT LEVEL on mixer (located on far right).

Document Camera

1. Turn on computer.
2. Turn data projector on by pressing ON/OFF for 2 seconds.
3. Turn on document camera.

PC Computer

1. Turn on computer.
2. Turn data projector on by pressing ON/OFF for 2 seconds.

HELPFUL HINTS:

1. Image fuzzy? To adjust, turn the lens on data projector left or right.
- 2.